

How to set-up your IP-VIP™ card

Once the IP-VIP™ card has been Fingerprint enrolled, it can only be used in High-Security mode. Only the person with their finger enrolled on that specific IP-VIP card can use it.


It can never be re-enrolled for someone else. It will NOT work unless the named authorised person activates it using their enrolled finger.

If lost, stolen, passed to a friend it CANNOT be used – even if the system administrator does not delete the IP-VIP card number from the IPGUARD® / BATICONNECT access control system.



STEP 1. SYSTEM ENROLMENT

Place the un-enrolled IP-VIP card on any proximity reader controlling entry through any door. This proximity reader will usually be one that is located near to the concierge / system administrator offices because they will always need to verify that it has been set-up in high-security mode by a specific named and authorised person.

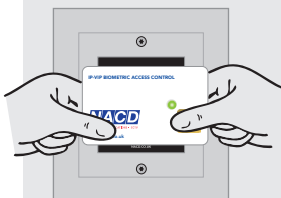

STEP 2. SCAN YOUR FINGER

Keep the IP-VIP card in place on the proximity reader (using your other hand) to keep it powered. A blinking green LED will indicate it is ready for enrolment. **Place your chosen finger on the sensor – the LED will briefly flash faster to confirm a successful fingerprint capture.**



STEP 3. REPEAT

Lift your finger from the sensor, keeping the card on the proximity reader. Place it back on the sensor and wait until the LED briefly flashes faster. **Repeat lifting and placing your finger until you get a single long green pulse.**



STEP 4. DONE

You can now use your IP-VIP card if a green LED flashes when you place your enrolled finger on the fingerprint sensor. If a solid red LED appears, the IP-VIP card will not work because your finger is not authorised.